## **INCLUDED COMPONENTS**


## **TOOLS REQUIRED**




1/2" SOCKET WRENCH

## NOTE:


ONCE YOU HAVE FINISHED THE SPOT SPRAYER AND ATV MOUNT ASSEMBLY, MOVE ON TO THE BOOM ASSEMBLY CARD TO COMPLETE YOUR SPRAYER.

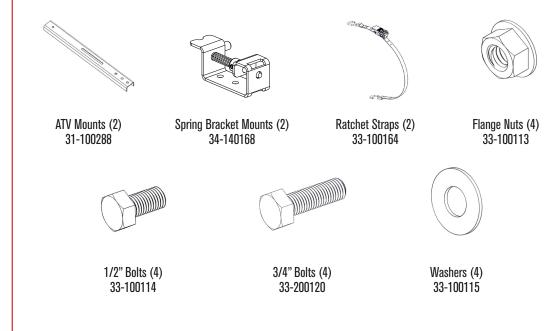

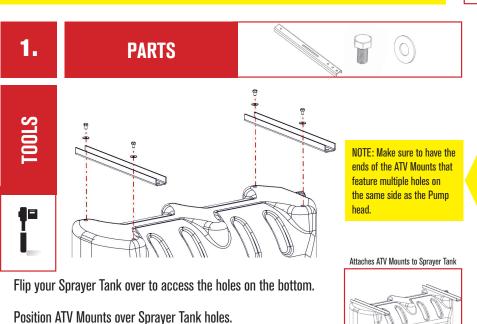

Attach ATV Mounts to Sprayer Tank with 1/2" Bolts and Washers


using a Socket Wrench. Do not over tighten.

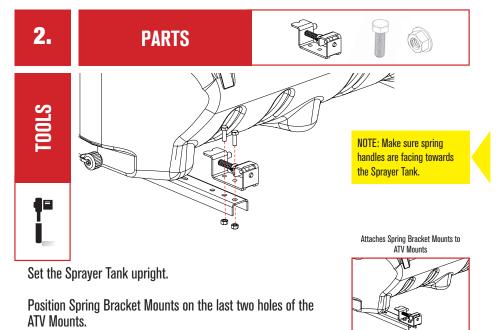

Attach Spring Brackets with 3/4" Bolts and Flange Nuts and tighten with Socket Wrench.

3. PARTS

TOOLS




NOTE: If not done already, assemble your Boom Kit after completing this step.

None

Position Sprayer Tank onto the back of an ATV, ensure that Spring Bracket Mounts hang over the back end.

Use Ratchet Straps within the vertical grooves on the Sprayer Tank to fasten Sprayer Tank securely to the ATV rack.



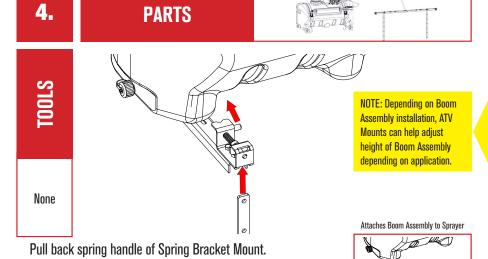

leased a Deare Hariald Duralist into the Carine Duralist Ma

Insert a Boom Upright Bracket into the Spring Bracket Mount and line up holes of each part.

Release spring handle to lock Boom Upright Bracket into place.